

## CAUTION IN USE

As flammable fuel is used in lighter, please pay special attention to the following points

### WARNING



Keep the lighter out of reach of children



Keep the lighter away from any open flame when refilling



Keep the lighter away from fire, heat or sunlight exceeding 50°C



Do not put the lighter into open fire.

- When igniting keep the lighter away from your face or clothes
- Use the lighter only for igniting cigarettes and ensure that the lighter is extinguished after use
- After refuelling please ensure before igniting the lighter that the adjuster screw is returned towards the minus (-) position and turn towards the plus (+) position gradually for suitable flame height.
- Do not touch the combustion part directly as this is of delicate structure and finely adjusted.
- Contains flammable gas under pressure
- Extreme heat is present above the visible flame, extra care should be taken to prevent burn injury or fire
- Do not keep lit for more than 10 seconds



After refilling ensure clothes and hands are completely wiped and dried of lighter fluid.



CATALYSIS  
WINDPROOF LIGHTER

INSTRUCTIONS

*Windmill*  
JAPAN

### ■IGNITION

Open the cap and push down the ignition lever firmly. This lighter is not supply gas to the burner nozzle by only open cap, just start supply gas and air to the burner nozzle by push down of the ignition lever. This lighter may be have some noise during supply gas and air to the burner nozzle and burning, but this noise is not dangerous.

### ■FLAME ADJUSTMENT

The feature of this lighter is a burning made inside of the burner, and for this purpose this lighter is using a catalyzer made by Platinum. Ideal gas supply (volume) on burning for lighting cigarette is a small blue flame appear on the burner as per following illustration.

Flame (Gas volume) adjustment should be done with adjusting screw on the bottom of the lighter as turn to (+) for larger gas supply and (-) for smaller gas supply.

Please use lighter with ideal gas supply adjustment as refer to following condition of wire.



Small Gas Supply

Ideal Gas Supply

Over Gas Supply

### ■GAS REFILL

Place tip of refill container into the inlet valve. Have both lighter and refill container in position as shown in diagram. Press tip of container into lighter firmly for about five seconds.

**NB:** Use only high quality butane gas

