

Instructions for Lynx RDR-1 Compact Reflex Sight

Mounting

RDR-1 fits directly onto pistols fitted with an RMR-type adapter plate out of the box and is supplied with an adapter plate for rifles fitted with a Picatinny rail or Weaver® type mounting block. When mounting RDR-1 onto a Picatinny or Weaver® rail, be sure that the sight is fully seated down onto the rail and push it forward toward the muzzle of the weapon before tightening the mounting clamp securely into place.

Operation

RDR-1 uses two pressure buttons on the side right side of the unit marked (Λ) and (V). Tap the up arrow (Λ) to increase the dot brightness to the desired brightness and tap down arrow (V) to decreases the dot brightness. There are ten levels of intensity. Press either button for two seconds to switch the illumination on and off. When turning the dot on, the brightness setting will be recalled from when it was last switched off.

The illumination turns off automatically after three hours however we recommend that you turn the unit off immediately after use to maximize battery life.

Windage and elevation adjustment

Note: The windage and elevation adjustment screws are locked into place with a locking screw to prevent unattended movement. The locking screw must be loosened before any adjustments are made.

1. Loosen the adjustment locking screw.
2. Adjust for zero. Each click of the windage or elevation adjustment screw moves the point of aim 1 MOA (29mm @ 100m / 1" @ 100yds).
3. Tighten the locking screw before firing the weapon.

Repeat steps 1 through 3 above until the sight is zeroed.

Battery Installation

To install or replace the battery gently prise the battery tray out from the body. Install a new battery with the positive (+) side facing upwards and push the battery tray back into position. When closed properly the battery tray should click into place and be flush with the body.

Battery type: CR2032

Battery life: 130 hours

Auto off: After 3 hours of inactivity

Warranty: Five years from date of purchase

Lynx Optics (Pty) Limited

PO Box 98078 Sloane Park South Africa 2152

tel +27(0)11 792 6644 • fax +27(0)11 792 8923 • info@lynx.co.za • www.lynx.co.za

Instructions for Lynx RDR-1 Compact Reflex Sight

Mounting

RDR-1 fits directly onto pistols fitted with an RMR-type adapter plate out of the box and is supplied with an adapter plate for rifles fitted with a Picatinny rail or Weaver® type mounting block. When mounting RDR-1 onto a Picatinny or Weaver® rail, be sure that the sight is fully seated down onto the rail and push it forward toward the muzzle of the weapon before tightening the mounting clamp securely into place.

Operation

RDR-1 uses two pressure buttons on the side right side of the unit marked (Λ) and (V). Tap the up arrow (Λ) to increase the dot brightness to the desired brightness and tap down arrow (V) to decreases the dot brightness. There are ten levels of intensity. Press either button for two seconds to switch the illumination on and off. When turning the dot on, the brightness setting will be recalled from when it was last switched off.

The illumination turns off automatically after three hours however we recommend that you turn the unit off immediately after use to maximize battery life.

Windage and elevation adjustment

Note: The windage and elevation adjustment screws are locked into place with a locking screw to prevent unattended movement. The locking screw must be loosened before any adjustments are made.

1. Loosen the adjustment locking screw.
2. Adjust for zero. Each click of the windage or elevation adjustment screw moves the point of aim 1 MOA (29mm @ 100m / 1" @ 100yds).
3. Tighten the locking screw before firing the weapon.

Repeat steps 1 through 3 above until the sight is zeroed.

Battery Installation

To install or replace the battery gently prise the battery tray out from the body. Install a new battery with the positive (+) side facing upwards and push the battery tray back into position. When closed properly the battery tray should click into place and be flush with the body.

Battery type: CR2032

Battery life: 130 hours

Auto off: After 3 hours of inactivity

Warranty: Five years from date of purchase

Lynx Optics (Pty) Limited

PO Box 98078 Sloane Park South Africa 2152

tel +27(0)11 792 6644 • fax +27(0)11 792 8923 • info@lynx.co.za • www.lynx.co.za