



Lynx MOA@20 reticle specifications

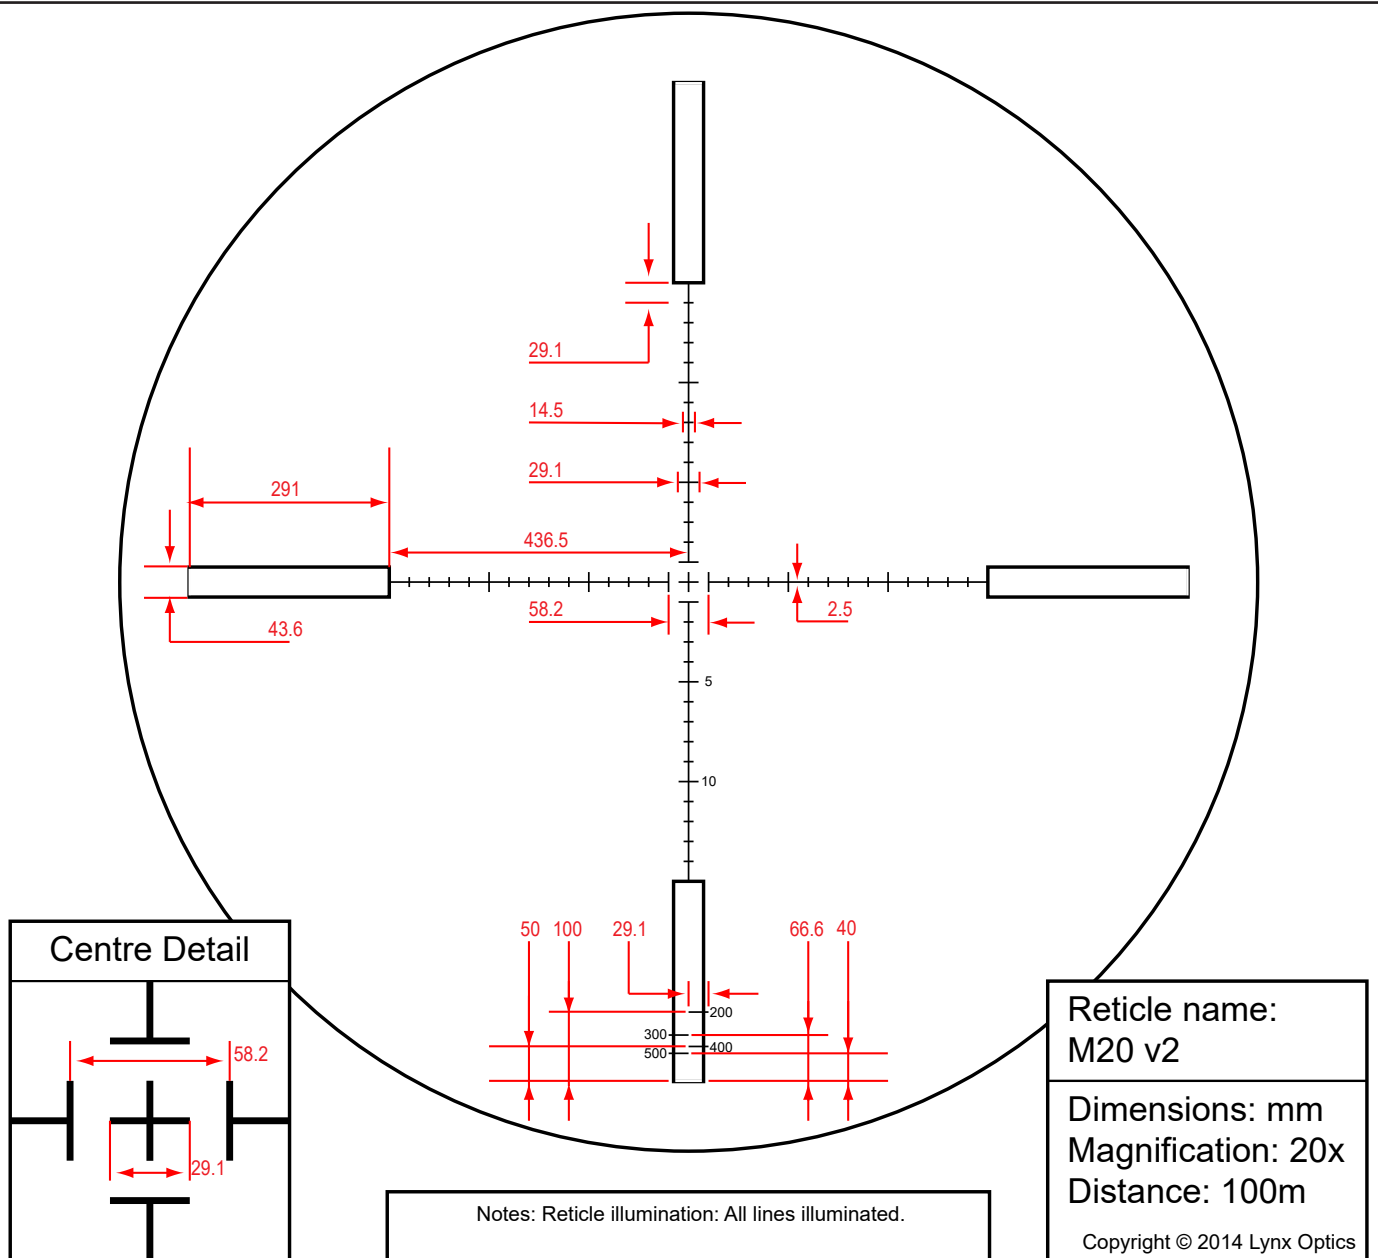

How to use the ranging scale

Lynx MOA@20 reticle features a ranging scale to assist you in ranging a 20cm high target or gong from 200 to 500 metres, to use the scale:

1. Set the scope magnification to 20x.
2. Hover the ranging scale over the 20cm target or gong with the bottom of the target on the baseline of the scale as shown in the diagram below.
3. The top of the target will be in line with the distance reading.

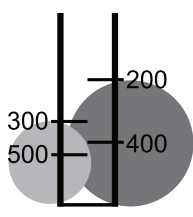

*In the example shown here on the left, i) a 20cm gong 200 metres away would appear the size of the darker disc, and ii) a 20cm gong 300 metres away would appear the size of the smaller, lighter disc. **When ranging a 20cm gong don't forget to set the scope to 20x.***